

HANDSET PARAMETERS

Loaded by Handset Firmware : HS_V2.01_B

Handset Gateway

User Experience Audio Levels Emergency Hardware

Radio PTT Key Beep Handsfree Function

Emergency Key Beep

Talk Around PTT Key Beep

Stealth Mode Always Active

Mute Speaker On PTT

Mute Speaker On Charge

LED Charge Indicate

Auto Turn On When Charging

8 Out of Range Auto Turn Off Timer (in hours)

3.5 Low Battery Beep Voltage (in volts)

5 Low Battery Beep Interval Timer (in minutes)

Handset Gateway

User Experience Audio Levels Emergency Hardware

0 Internal Mic Gain

6 Internal Mic High Gain Boost

9 External Mic Gain

6 External Mic High Gain Boost

9 Remote PTT Gain Boost

200 Audio Integrity (per second)

Fixed Alert Tone Volume

5 Alert Tone Volume

Handset Gateway

User Experience Audio Levels Emergency Hardware

Press and Hold Emergency Function

0 Audio Link Active Time (in second)

Short or Long Press Emergency Function

0 Transmit Time (in second)

0 Receive Time (in second)

1 Emergency Repeat Cycles

Transmit Audible Emergency Tone

Handset Gateway

User Experience Audio Levels Emergency Hardware

Speaker -ve Hirose Pin 2 Function

Button Assignments

Long Press Duration 1000 ms

	Press and Hold	Short Press	Long Press
Acc PTT	Radio PTT	(Disabled)	(Disabled)
PTT	Radio PTT	(Disabled)	(Disabled)
Top 1	Emergency	(Disabled)	(Disabled)
Top 2	Talk Around PTT	(Disabled)	(Disabled)
Left 1	(Disabled)	Volume Up	(Disabled)
Left 2	(Disabled)	Volume Down	(Disabled)
Right 1	(Disabled)	(Disabled)	On / Off

GATEWAY PARAMETERS

Loaded by Gateway Firmware : GW_V2.11_A

PRO-GATEWAY:

Handset Gateway

Audio Levels Hardware

3 Receive Input Gain From Radio

0 Transmit Output Gain To Radio

9 Talk Around Output Gain To Other X10DRs

Monitor Emergency Input Alert Tone

Find-Me Function

Dual Operational Mics

Public Address Mode

Radio Receive VOX COR

70 VOX Trigger Level

ELITE GATEWAY:

Handset Gateway

Audio Levels Hardware

3 Receive Input Gain From Radio

0 Transmit Output Gain To Radio

9 Talk Around Output Gain To Other X10DRs

Monitor Emergency Input Alert Tone

Find-Me Function

Multi Operational Mics

Public Address Mode

Radio Receive VOX COR

70 VOX Trigger Level


Common for Pro and Elite:

	I/O	Active	Function	Pulse (ms)
Radio PTT	Output	Low	Radio PTT	0
Radio Emergency	Output	Low	Emergency	0
Radio COR	Input	Low	Radio COR	0
Function 1	Input	Low	Remote PTT	0
Function 2	Input	Low	Find Me	0
Function 3	Output	Low	Aux 1	500
Function 4	Output	Low	Aux 2	500
Function 5	Output	High	Handsfree active	0
Function 6	Output	High	Handset in Cradle	0

PROGRAMMER

Above parameters are loaded by "DEFAULTS" button in Programmer : V2.03A

Distributed by:

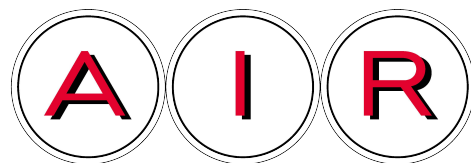

Communication Solutions When It Matters

American International Radio, Inc. (AIR)

sales@airradio.com | www.airradio.com